


钥匙选择开关

类型	动作类型	触点结构	③ 触点开关安装位置			订购型号
			1	2	3	
钥匙2档型 	自复 	1NO	NO	-	-	AL-4X1W100
		1NC	-	-	NC	AL-4X1W002
		2NO	NO	-	NO	AL-4X1W101
		2NC	NC	-	NC	AL-4X1W202
		1NO+1NC	NO	-	NC	AL-4X1W102
		3NO	NO	NO	NO	AL-4X1W111
		更多结构				AL-4X1W ③③③
	自锁 	1NO	NO	-	-	AL-4X2W100
		1NC	-	-	NC	AL-4X2W002
		2NO	NO	-	NO	AL-4X2W101
		2NC	NC	-	NC	AL-4X2W202
		1NO+1NC	NO	-	NC	AL-4X2W102
		3NO	NO	NO	NO	AL-4X2W111
		更多结构				AL-4X2W ③③③
钥匙3档型 	自复 	2NO	NO	-	NO	AL-4W1W101
		1NO+1NC	NO	-	NC	AL-4W1W102
		2NC	NC	-	NC	AL-4W1W202
	自锁 	2NO	NO	-	NO	AL-4W2W101
		1NO+1NC	NO	-	NC	AL-4W2W102
		2NC	NC	-	NC	AL-4W2W202
	左复右锁 	2NO	NO	-	NO	AL-4W3W101
		1NO+1NC	NO	-	NC	AL-4W3W102
		2NC	NC	-	NC	AL-4W3W202
		1NC+1NO	NC	-	NO	AL-4W3W201
	左锁右复 	2NO	NO	-	NO	AL-4W4W101
		1NO+1NC	NO	-	NC	AL-4W4W102
		2NC	NC	-	NC	AL-4W4W202
		1NC+1NO	NC	-	NO	AL-4W4W201


③ 注释：触点可更多选择，灵活组合搭配。请指定上表中的“订购型号”中的③ 依左侧触点结构选择搭配（1:代表常开，2:代表常闭）。

● 外形尺寸

(单位:mm)

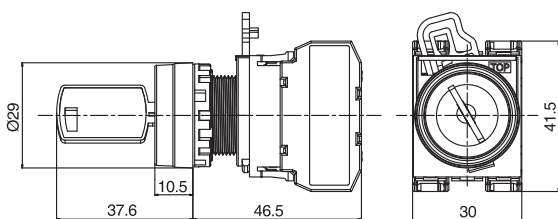

钥匙2档选择开关

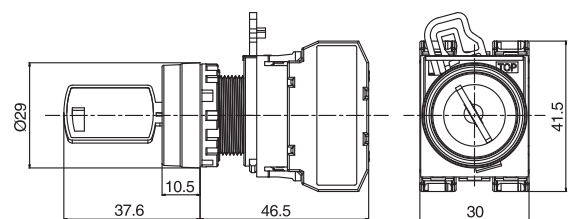

钥匙3档选择开关