










## 选择开关（不带灯）

类型	动作类型	触点结构	③ 触点开关安装位置			订购型号
			1	2	3	
2档型 	自复 	1NO	NO	-	-	AL-3X1K100
		1NC	-	-	NC	AL-3X1K002
		2NO	NO	-	NO	AL-3X1K101
		2NC	NC	-	NC	AL-3X1K202
		1NO+1NC	NO	-	NC	AL-3X1K102
		3NO	NO	NO	NO	AL-3X1K111
		更多结构				AL-3X1K③③③
	自锁 	1NO	NO	-	-	AL-3X2K100
		1NC	-	-	NC	AL-3X2K002
		2NO	NO	-	NO	AL-3X2K101
		2NC	NC	-	NC	AL-3X2K202
		1NO+1NC	NO	-	NC	AL-3X2K102
		3NO	NO	NO	NO	AL-3X2K111
		更多结构				AL-3X2K③③③
3档型 	自复 	2NO	NO	-	NO	AL-3W1K101
		1NO+1NC	NO	-	NC	AL-3W1K102
		2NC	NC	-	NC	AL-3W1K202
	自锁 	2NO	NO	-	NO	AL-3W2K101
		1NO+1NC	NO	-	NC	AL-3W2K102
		2NC	NC	-	NC	AL-3W2K202
	左复右锁 	2NO	NO	-	NO	AL-3W3K101
		1NO+1NC	NO	-	NC	AL-3W3K102
		2NC	NC	-	NC	AL-3W3K202
		1NC+1NO	NC	-	NO	AL-3W3K201
	左锁右复 	2NO	NO	-	NO	AL-3W4K101
		1NO+1NC	NO	-	NC	AL-3W4K102
		2NC	NC	-	NC	AL-3W4K202
		1NC+1NO	NC	-	NO	AL-3W4K201

③ 注释：触点可更多选择，灵活组合搭配。请指定上表中的“订购型号”中的③ 依左侧触点结构选择搭配（1:代表常开，2:代表常闭）。

### ● 外形尺寸

(单位:mm)

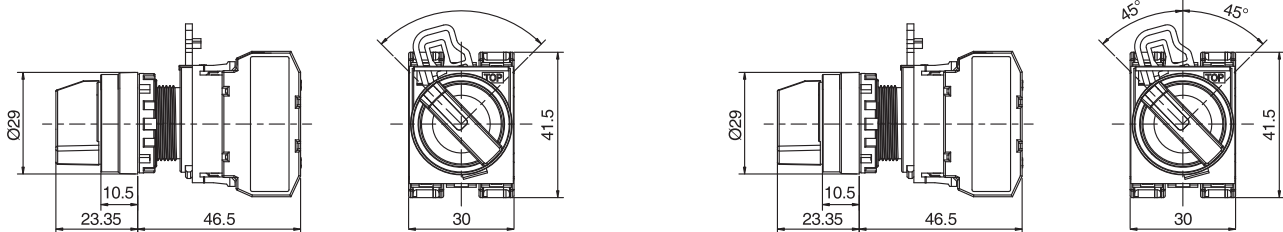

2档选择开关

3档选择开关